
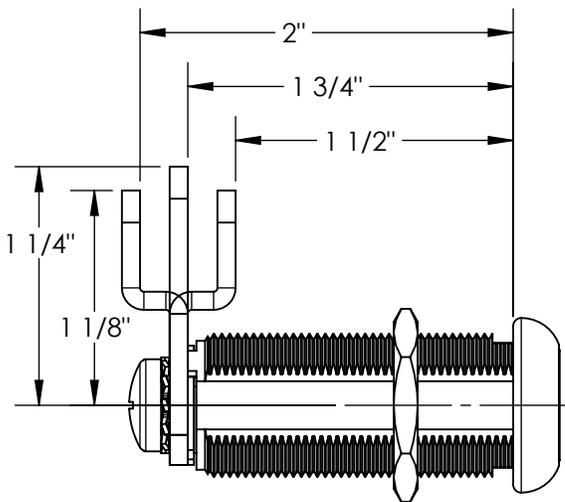


MFW23168 SINGLE BITTED CAM LOCK

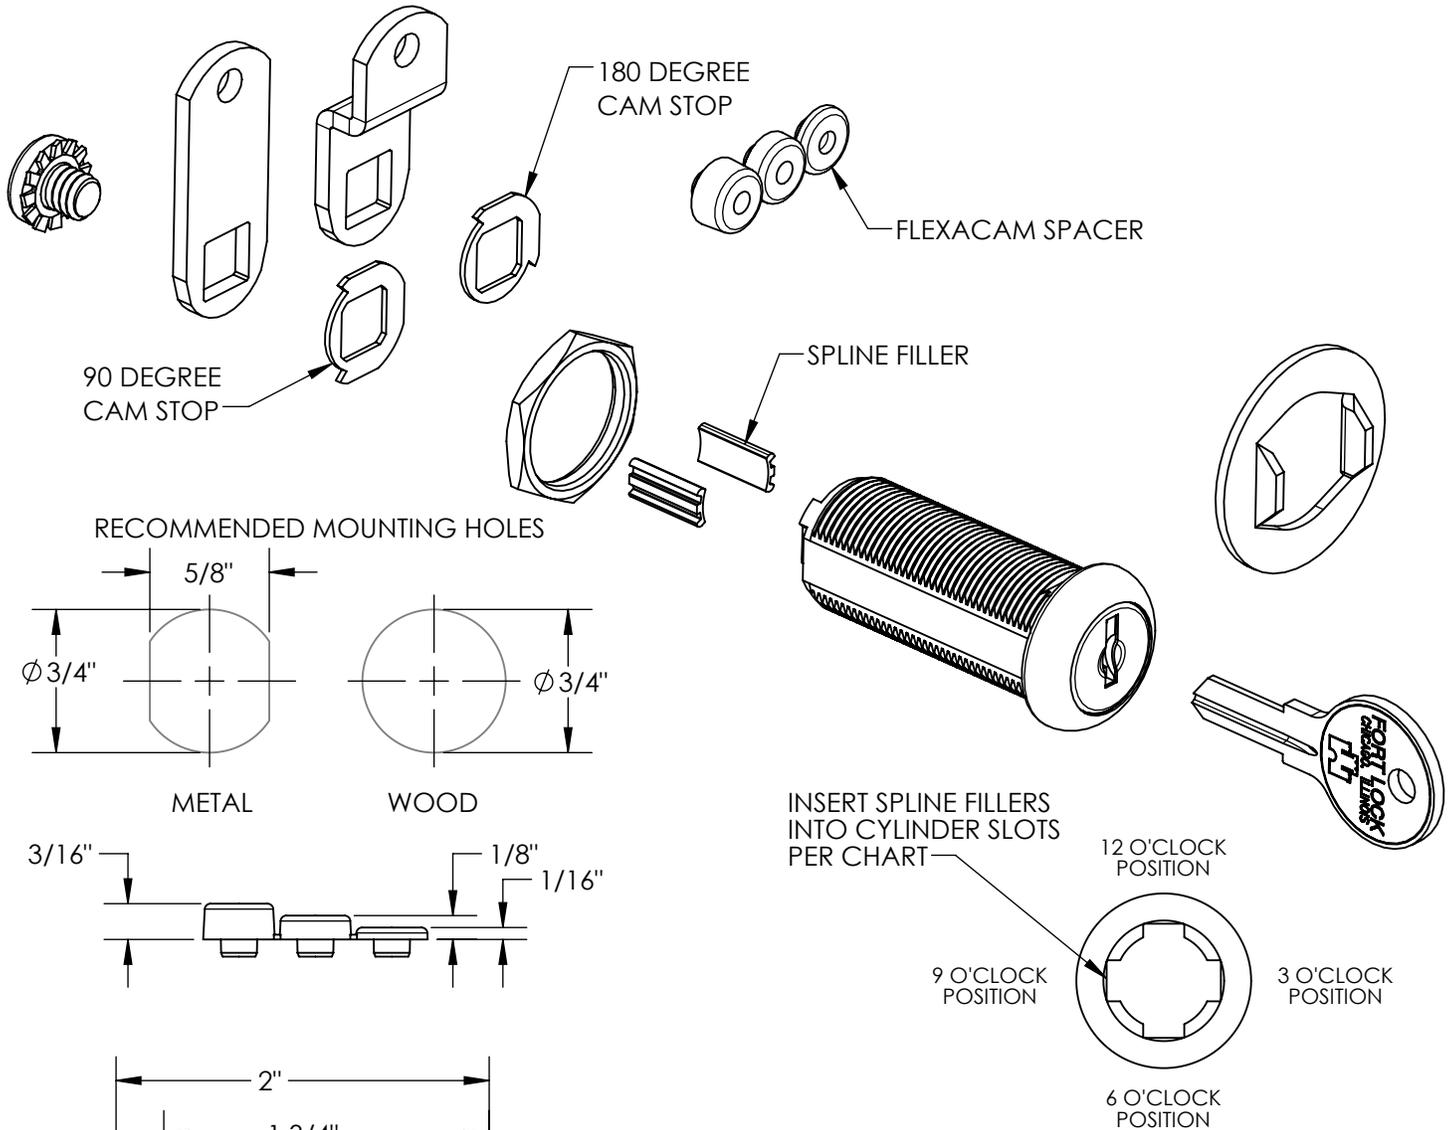

COMBINATIONS OF 2 CAMS AND 3-WAY FLEXACAM SPACER PROVIDE 12 DIFFERENT THICKNESS DIMENSIONS

FUNCTION NO.	KEY ROTATION FROM 12 O'CLOCK POSITION TO	KEY REMOVABLE AT	USE CAM STOP	INSERT SPLINE FILLER AT
1	3 O'CLOCK	12 O'CLOCK ONLY	90 DEG RIGHT	3 O'CLOCK
2	3 O'CLOCK	12 AND 3 O'CLOCK	90 DEG RIGHT	NONE
3	6 O'CLOCK (RIGHT)	12 AND 6 O'CLOCK	180 DEG RIGHT	3 O'CLOCK
4	9 O'CLOCK	12 O'CLOCK ONLY	90 DEG LEFT	9 O'CLOCK
5	9 O'CLOCK	12 AND 9 O'CLOCK	90 DEG LEFT	NONE
6	6 O'CLOCK (LEFT)	12 AND 6 O'CLOCK	180 DEG LEFT	9 O'CLOCK

FORT MULTI - FUNCTION CAM LOCK


With this one lock, you can easily make an assembly that will meet your own particular requirements

*CAM STOPS



180 DEG. 90 DEG.


SPLINE FILLERS

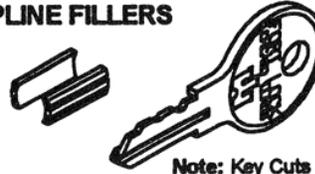


Note: Key Cuts Up

*For either Right or Left Hand Application (by Reversing)

Diagram (as you face the Lock)
with Flats as shown

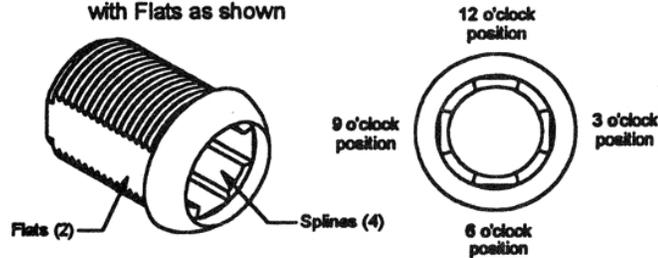

FOR 23168 (1 3/4") ONLY !

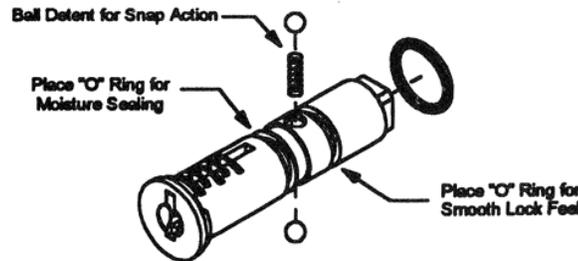

Select the function required and assemble the lock, as specified below

FUNCTION NO.	KEY ROTATION FROM 12 O'CLOCK POSITION TO	KEY REMOVABLE AT	USE CAM STOP	INSERT SPLINE FILLER AT
1	3 O'CLOCK	12 O'CLOCK ONLY	90 DEG RIGHT	3 O'CLOCK
2	3 O'CLOCK	12 AND 3 O'CLOCK	90 DEG RIGHT	NONE
3	6 O'CLOCK (RIGHT)	12 AND 6 O'CLOCK	180 DEG RIGHT	3 O'CLOCK
4	9 O'CLOCK	12 O'CLOCK ONLY	90 DEG LEFT	9 O'CLOCK
5	9 O'CLOCK	12 AND 9 O'CLOCK	90 DEG LEFT	NONE
6	6 O'CLOCK (LEFT)	12 AND 6 O'CLOCK	180 DEG LEFT	9 O'CLOCK



ROUND HOLE INSTALLATION WITH THE WONDER WASHER IN WOOD OR METAL

After drilling 3/4" hole in either wood or metal position the Wonder Washer (tabs inward and vertical) firmly in to hole from either the front or rear surface, depending on thickness of material and preference. The Wonder Washer provides the double "D" shape needed to prevent the lock from rotating when installed and replaces with the other type of washers.

Now continue with the installation per instructions on the bag.